

## Discharging Instructions Manual E-Flex Easy Flexitank


Rev10-201228





#### **Positioning the Container**

Ensure that the front of the container is in a higher position compared to the back/door side, so that it will have the necessary slope to facilitate the discharge. Interval of 15cm is sufficient.

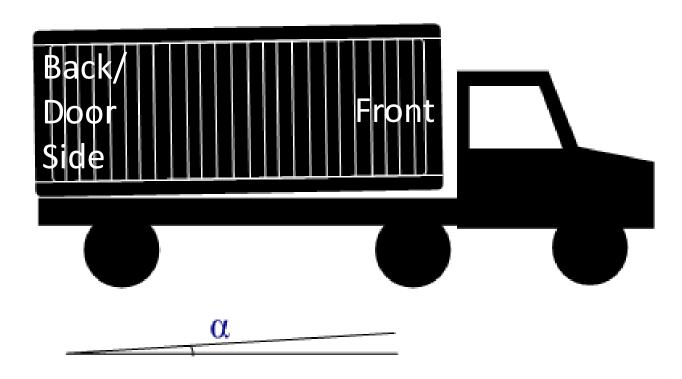



#### Coupling





Our standard valve is 3" male camlock.

You will need to have a 3 " female cam-lock coupling. (DIN EN 14 420–7) Upon request 2" reductor is available.

## Coupling











- 1. Remove the dust cap.
- 2. Couple the hose.
- 3. Compress the latch.
- 4. Rotate the arm.
- 5. Unroll the bonnet.



## Discharging

- Start discharging the E-Flex.
- Do not suspend the hose.
- Use a pump to decant the flexitank.





### | Flexitank Lashing Straps

#### EFFICIENT SMART SAFE


When the discharging is completed, untie/cut the lashing straps (shown with red arrows) fixed to the container lashing rings.



AC42 / AV42 / EA42



A003/A0L3/A0P3/AVP3

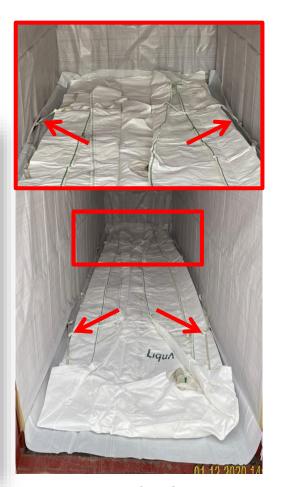

EA41 / EC41



## Discharging

After pumping all the product out, pull both sides of the E-Flex to the center.







### Discharging

Roll-up the E-flex starting from the front/nose side of the container, pushing the liquid towards the valve.







## Discharging

The E-Flex should be empty and ready for recycling at this point.





LiquA

#### THANK YOU

UguA Europe
Calle Jose Aguirre 40, Pius 31 Viennos España
CP: 46011
+34-91 1238506
UguA Fabrika
Ataboy Cd. No 28 Kat 1 Çekmekby 34794 İstanbul
Türkiye
+90 216 312 8660

www.liquatrans.com

I info@liquatrans.com