
# EFFICIENT SMART SAFE



# R-Flex-40ft Reefer Flexitank Fitting Instructions Manual 16 kLt

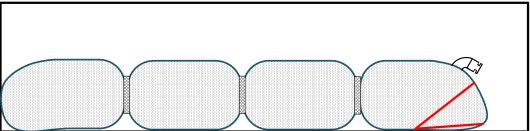



#### **Contents of the Box**



Open the R-Flex box and ensure that the following are in the package:

- 1. R-Flex
- 2. 2 x Steel Lashing Buckles (Optional)
- 3. 28 x Corrugated Plastic Boards
- 4. PP Lining Material for floor
- 5. Warning labels
- 6. 2 x Cable ties

#### The box will be used as door protection board. DO NOT throw it away!





## **Container Selection**

Ensure that:

- The reefer container is no older than 5 years.
  IMPORTANT: The above is the requirement of Container Owners Assossiciation. If it is not applicable ensure that below conditions are obtained.
- Reefer containers are <u>clean</u>, structurally sound and in excellent condition.
- The container is free of odor.
- The reefer container has no damage on the floor. The floor should be inspected / tested using a flat steel bar that will highlight any rough or sharp areas. The operator should test the floor both ways – towards the front wall and towards the door.







#### **Container Preparation**

- Any sharp objects or surfaces should be removed from the floor and the sides of the container. This should include loose sharp objects that might circulate when the reefer fans operate.
- Any sharp or uneven surfaces on the floor should be covered with a fabric tape. Nails, sharps or any other objects that may damage/puncture the R-Flex should be removed or covered with fabric tape to make it safe for the flexitank.




### **Container Lugs**



Use the container lugs if available between the outer most rails:

• The door side lugs should be at least 320cm from the doors of the container.

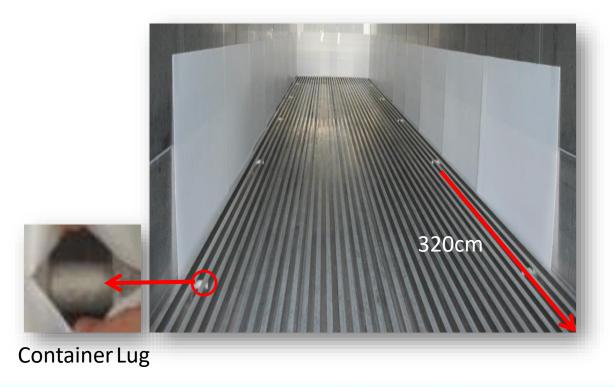




#### Buckles



Liqu/


If the reefer container does not have any container lugs, use the buckles provided in the box.

• The buckles must be fixed tightly to prevent movement of the R-Flex.

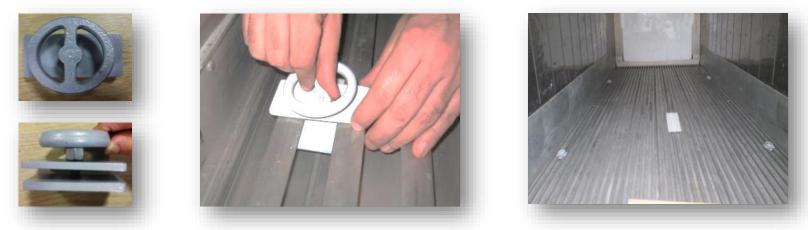

Do not overtighten the floor fasteners.



 


### Lining

- Cover the reinforcement/"kickboard" area on both side walls and the end wall as seen below with provided PP Flude Board Sheets. Ensure all edges are fully covered by tape.
- Ensure any remaining rough edges, joins, screws, surfaces are adequately protected by thick tape including the front wall.
- Cover any protruding areas such as finger holds in the front wall.





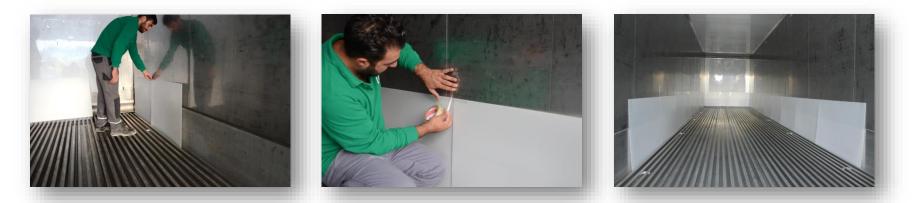



#### Lining



















# Lining

- Place the supplied PP material. Ensure that the smooth surface is facing up.
   Ensure that there is a gap of 25cm at the door side to allow optimal air circulation.
- Secure the lining in place with strong tape that will withstand the reefer operation and temperatures.







### **Positioning the R-Flex**

- Ensure the flexitank is positioned in the center symetrically on the floor.
- Unroll the R-Flex towards the front wall.
- **DO NOT** step on the R-Flex with hard shoes.






Ligu

### Warning

 Ensure that the front of R-Flex is leaning to the front/nose of the container.


- DO NOT remove the pre-folding tapes shown with arrows!
- DO NOT open the folds!

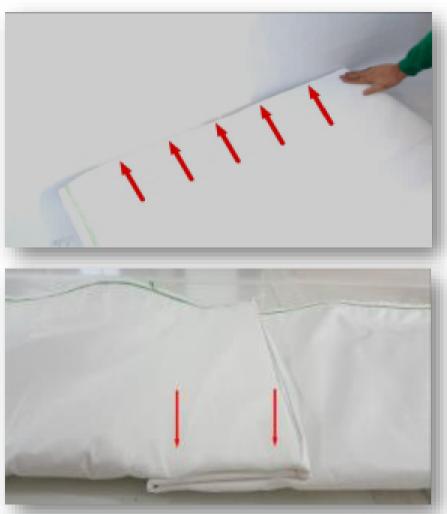

## Belt Tying



R-Flex must be fastened to the lashing rings in the container to avoid sliding.

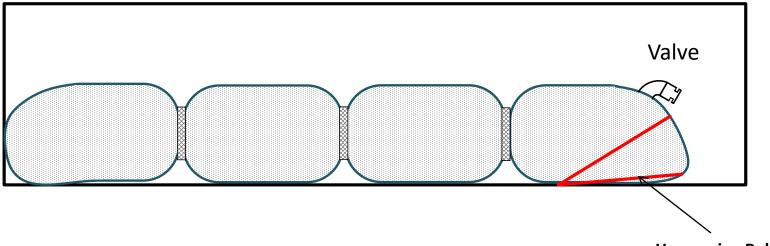





# **Door Side of the Container**



#### Tie the lashing strap to the lug/buckle"taut but not tight".

**IMPORTANT:** The green scotch/duck tapes on the flexitank indicates the location of the first Anti-sloshing rings. Ensure that the harnessing belts are tied to a lug after the first ring.






# Buckling



- Make a small cut on fitting fabric to pick out the container lugs/buckle.
- Take the free end of belt.
- Pass the belt through the container lugs/buckle.

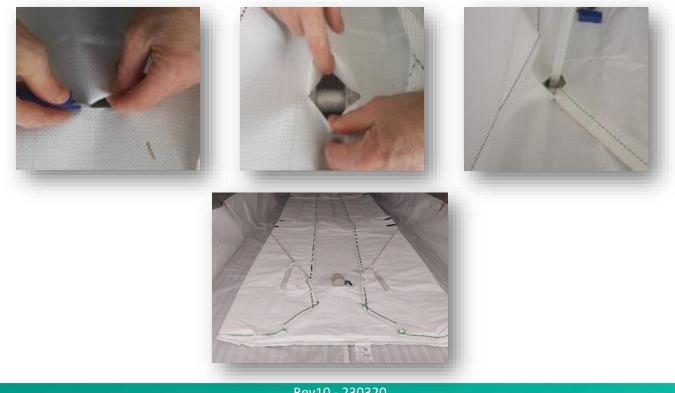





IMPROPER FITTING MAY CAUSE CAPACITY PROBLEMS, INNER LAYERS MAY GET STUCK AND STRETCH. THIS MAY CAUSE SEVERE LEAKINGS. ONLY TRAINED AND LICENSED OPERATORS ARE ALLOWED TO FIT OUR FLEXITANKS.

IF FITTING OPERATION HAS BEEN PERFORMED AT ANOTHER LOCATION, PLEASE ENSURE THAT THE E-FLEX HAS NOT MOVED DURING LOCAL TRANSPORTATION.




## Warning Labels



- Stick the warning labels on the side walls and the doors of the container.
- Clean the surface of the container prior to sticking the label for better adherence.



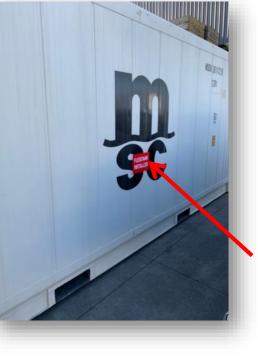

#### FAQ

#### What happens if I don't tie the harnessing belts?

You may consider the harnessing belts of R-Flex like the seat belt of your car. If you don't buckle your seat belt and no accident happens during your travel, you arrive to the final destination safely. However in case of an accident, due to lack of seat belt, you may die or get severely injured.

Same principal is valid for R-Flex. If you don't tie the harnessing belts, nothing may happen until the final destination but in the event of an impact or accident, flexitank may shift towards the doors and cause a severe damage.

Also, when the container arrives to the final destination, flexitank may bulge out of the container at the time consignee opens the door. This might create hazard to the operators.

Ensure that harnessing belts are tied according to LiquA instructions.



#### FAQ



#### Do I necessarily need to line every container with a protective material?

Yes...

We ask you to clean the container and inspect the sharp objects on the container surface very carefully. However, metal floor of the reefer containers may always have the possibility to contain sharp edges on the surface. Sharp edges as such may cause damage on the surface of the flexitank. We recommend lining the containers with corrugated plastic boards and pp woven material provided by LiquA.

<u>IMPORTANT:</u> Lining the container DOES NOT guarantee to protect R-Flex against sharp objects. Take necessary precautions before lining the container.

#### FAQ



#### If I shorten the belts, untie the knots or position the flexitank in a different location can I reduce the flexitank capacity?

No.

- DO NOT change position of R-Flex on the floor of the container.
- DO NOT untie the knots on the flexitank.
- DO NOT tie the harnessing belts to a different location other than shown on this manual.
- DO NOT change the foldings.
- DO NOT remove the guiding paper tapes on the R-Flex.

In the contrary, changing any of the above not only does not change the capacity but also creates a hazard which may end up with a leak. R-Flex is designed to be assembled as easy as possible. Our production team has already folded, knotted, taped and prearranged everything for an easy fitting. Do not change any of the above. Just unroll the R-Flex, position correctly and tie the belts to the proper lashing rings/lugs. Changing any of the above DOES NOT reduce the capacity. Fill R-Flex within the tolerances mentioned at the label and datasheet.





#### THANK YOU

UgaA Europe Calle Jose Aguirre 40, Piso 3V Jenota España CP- 46011 +34 91 1238506 UgaA Fabrika Atabey Cd. No 28 Kat J Çekmekêy 34'94 İstanbul Türkiye +90 216 312 8660

www.liquatrans.com | info@

1 info@liquatrans.com