

**EFFICIENT
SMART
SAFE**




***Discharging Instructions Manual
Aseptic Flexitanks***

220121

LiquA

Positioning the Container

Ensure that the front of the container is in a higher position compared to the back/door side, so that it will have the necessary slope to facilitate the discharge.
Interval of **15cm** is sufficient.

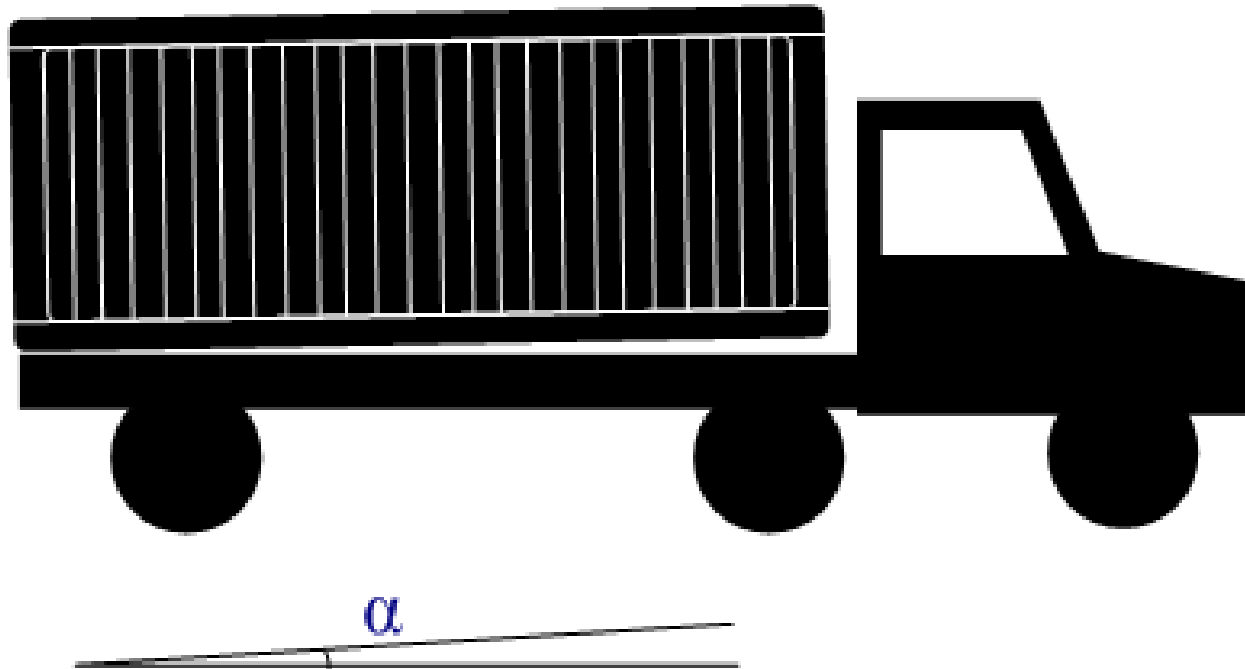



**EFFICIENT
SMART
SAFE**

I Coupling

Our 3' Aseptic Valve with Jets has 3" Dairy connection EN 11851. You will need to have a female connector that includes a nut, liner and seal.



Coupling

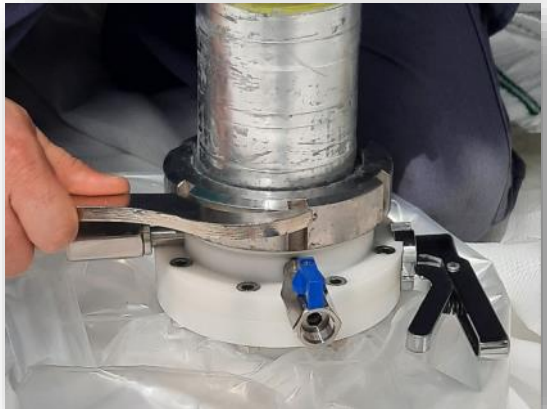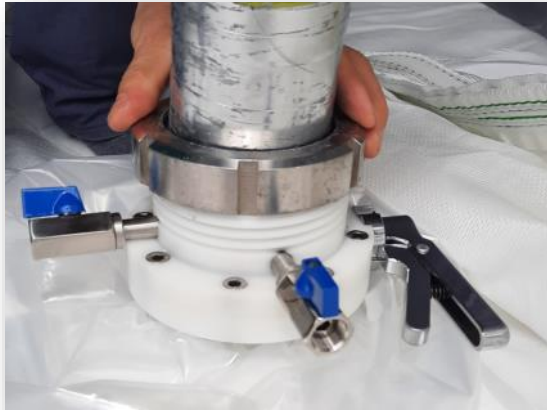

1. Untie or cut both bonnet/plastic cover layers around the valve.
2. Couple the hose.
3. Rotate the arm.



**EFFICIENT
SMART
SAFE**

Discharging

- Start discharging the flexitank.
- Do not suspend the hose.
- Use a pump to decant the flexitank.



Flexitank Lashing Straps

When the discharging is completed, untie/cut the lashing straps (shown with red arrows) fixed to the container lashing rings or buckles.



Discharging

After pumping all the product out, pull both sides of the flexitank to the center.



Discharging

Roll-up the flexitank starting from the front/nose side of the container, pushing the liquid towards the valve.



**EFFICIENT
SMART
SAFE**

Discharging

The flexitank should be empty and ready for recycling at this point.



**EFFICIENT
SMART
SAFE**

LiquA

THANK YOU

LiquA Europe
Calle José Aguirre 40, Piso 3 Valencia España
CP: 46011
+34 91 1238506
LiquA Fabrika
Atabey Cd. No 28 Kat 1 Çekmeköy 34794 İstanbul
Türkiye
+90 216 312 8660

www.liquatrans.com

| info@liquatrans.com